




HIDROMAS

hidromasglobal.com



HIDROMAS
YOUR GLOBAL TIPPING PARTNER


Mounting Instructions Directional Control Valve (DCV)

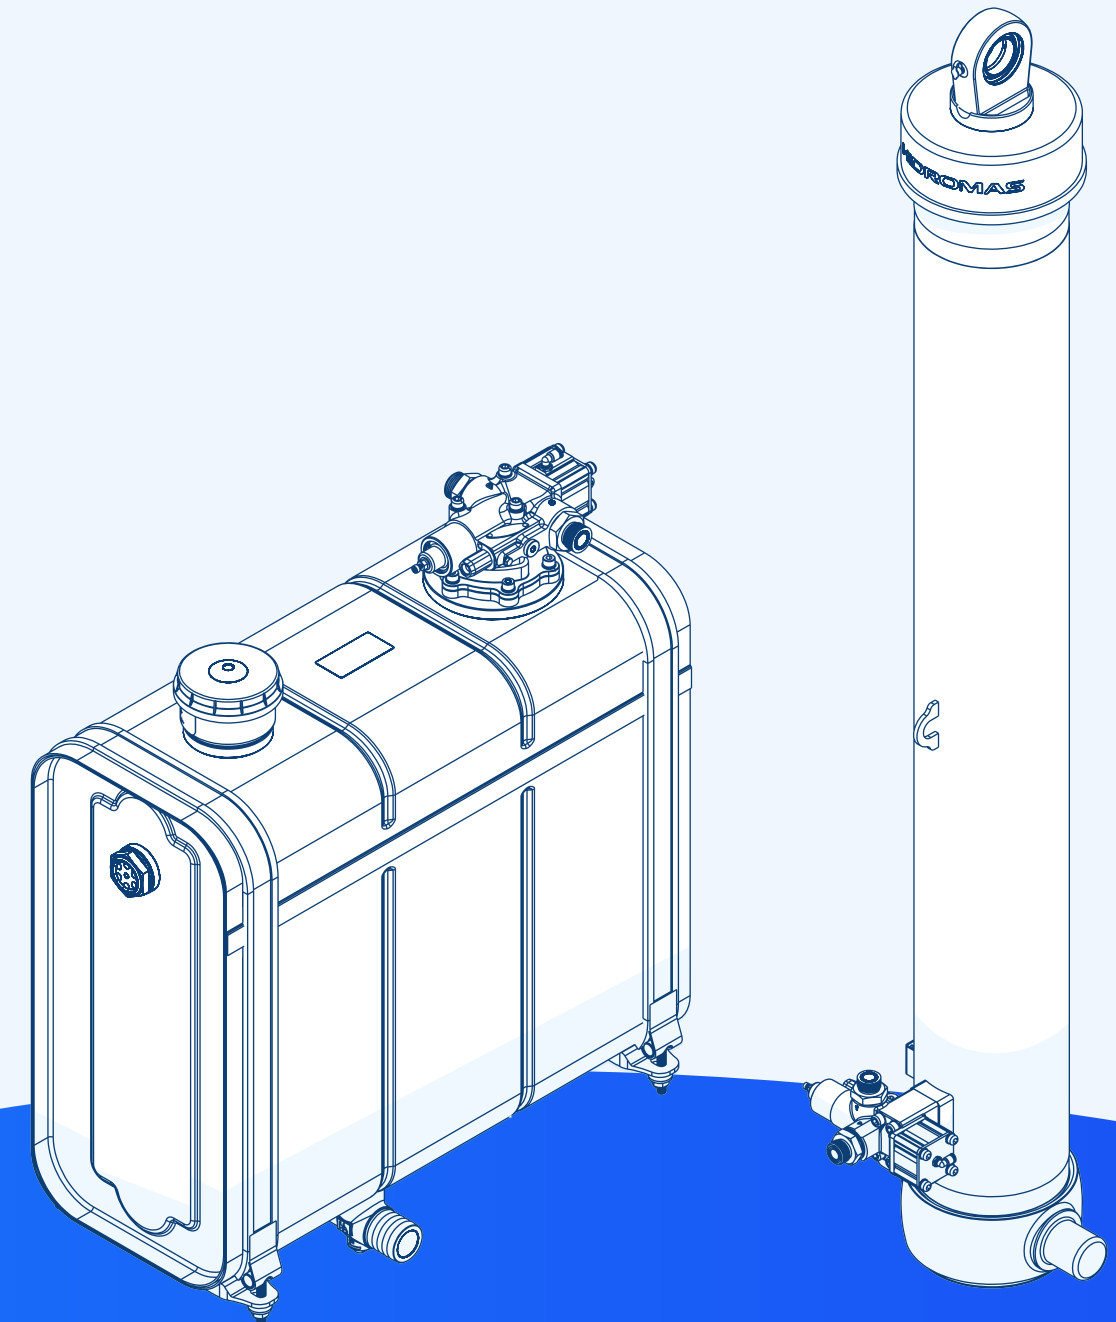


Mounting Instructions

HID-DCVMI-00 / 22-01-2026 / R00

**Cylinder
Mounted DCV (CM)**

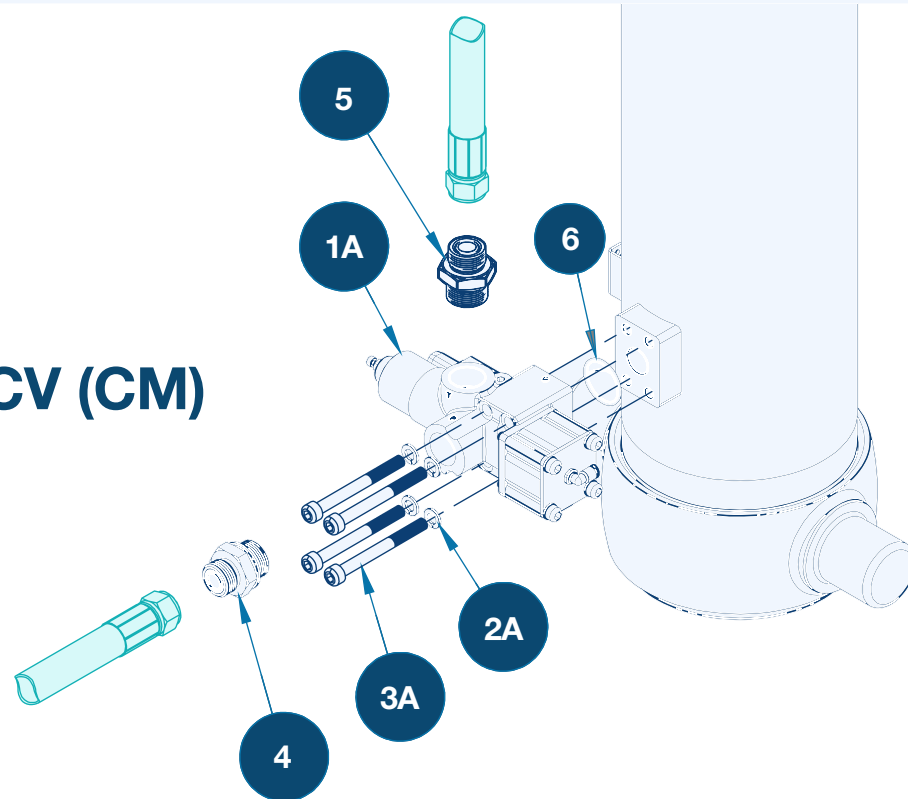


**Tank
Mounted DCV (TM)**

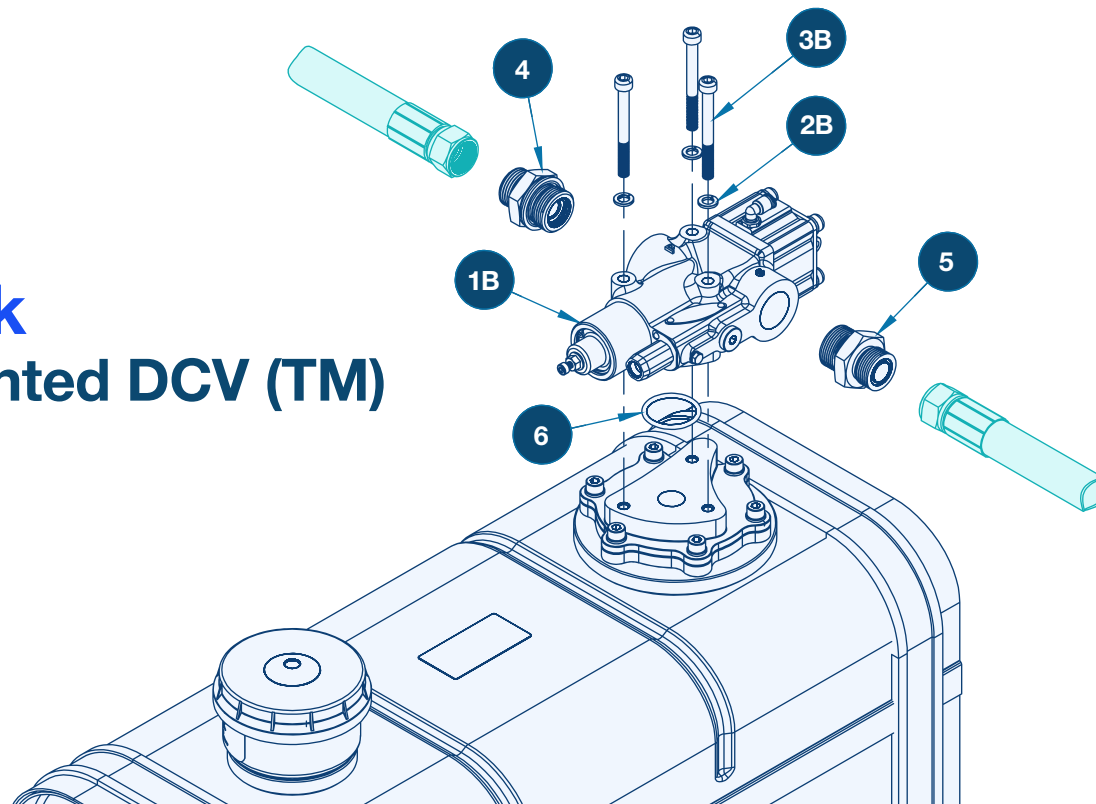


Mounting Instructions

HID-DCVMI-00 / 22-01-2026 / R00


1A

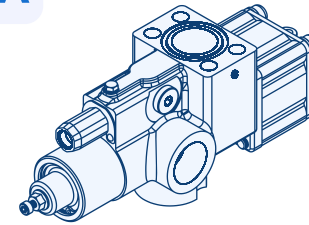


1B

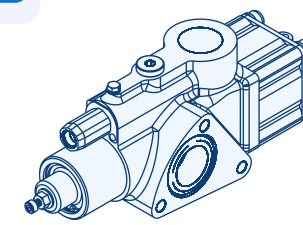


2A

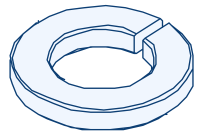


3A

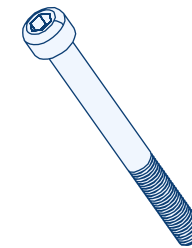


2B

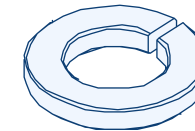


3B

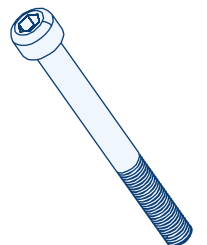


4

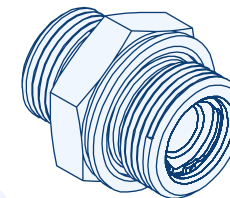

5

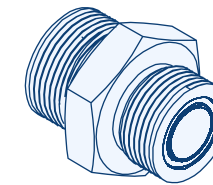

6

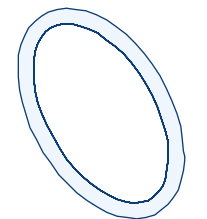


**No. of
Parts**

S.No	Description	Qty
1A	DCV 3B 140L - TM	1
1B	DCV 4B 140L - CM	1
2A	Spring Washer M10	4
3A	Allen Bolt M10 × 80	4
2B	Spring Washer M8	3
3B	Allen Bolt M8 × 80	3
4	NRV Adapter	1
5	HP Adapter	1
6	O-Ring (Comes with DCV)	1


Mounting Instructions

HID-DCVMI-00 / 22-01-2026 / R00

For Tank Mounted DCV (TM)

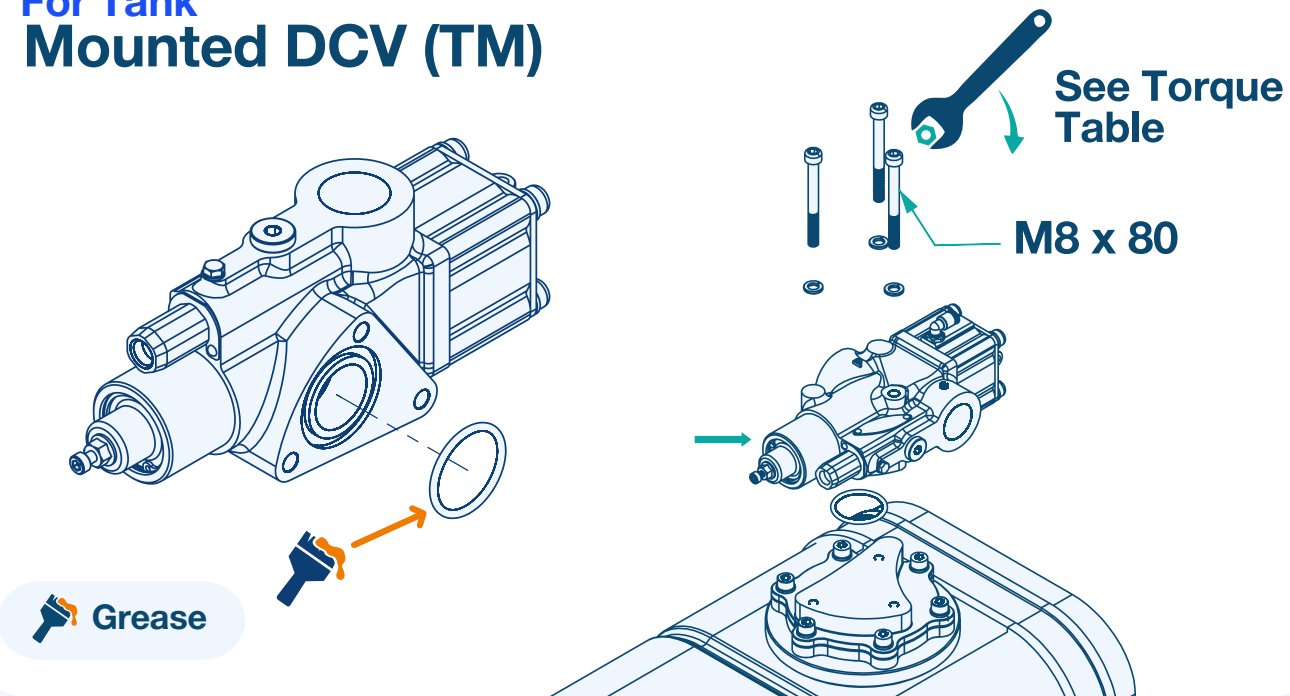


For Cylinder Mounted DCV (CM)

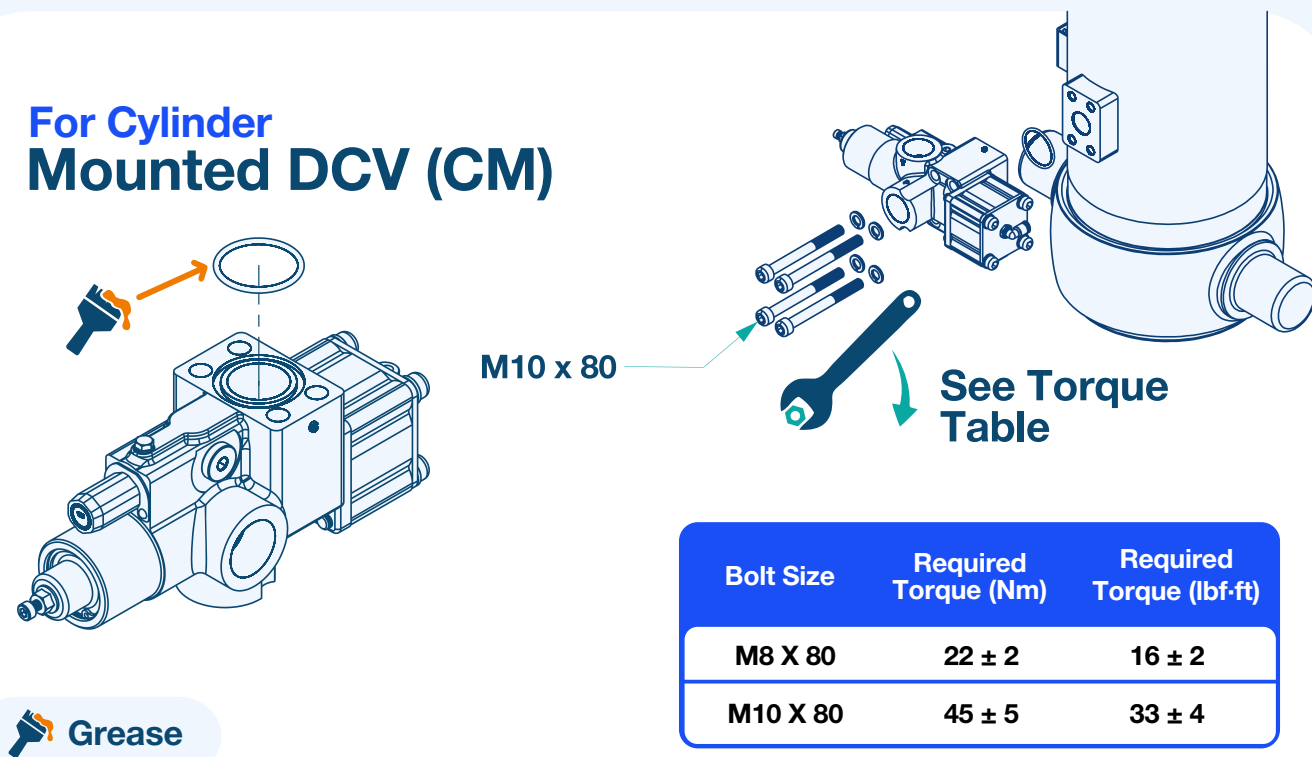

Mounting Instructions


HID-DCVMI-00 / 22-01-2026 / R00

For Tank Mounted DCV (TM)

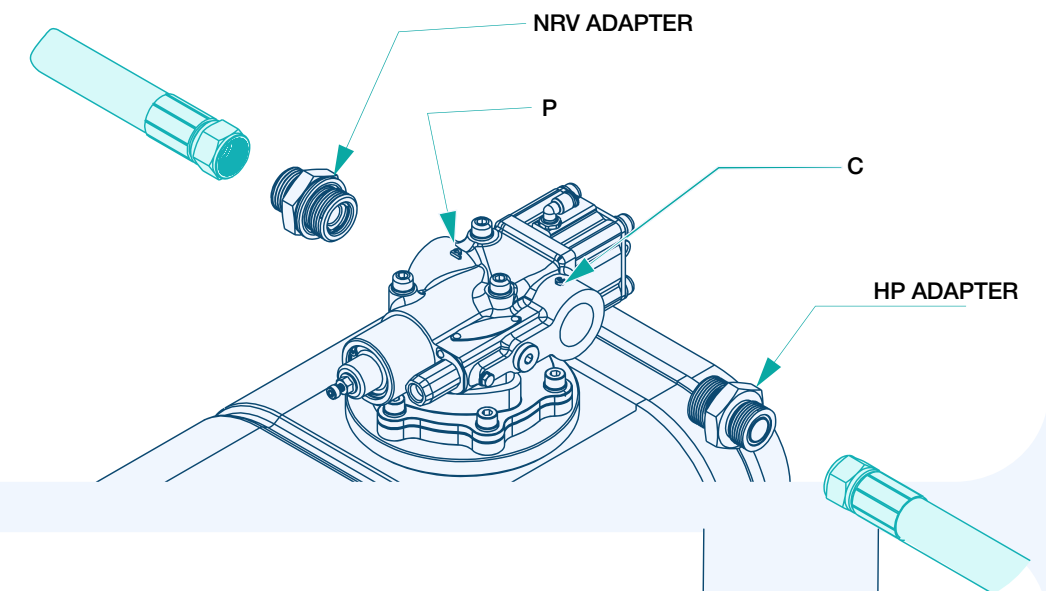

For Cylinder Mounted DCV (CM)

Adapter	Required Torque (Nm±10)	Required Torque (lbf-ft ±7)
NRV	155	114
HP ADAPTER	155	114

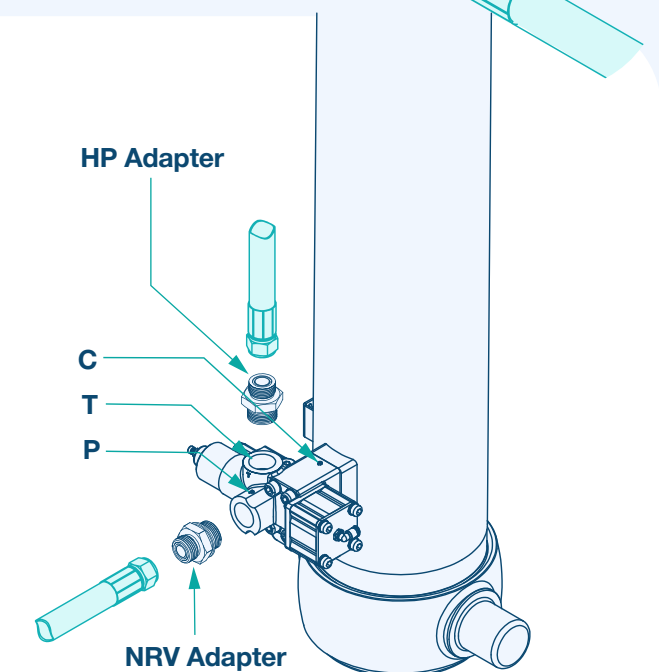

Ports Identification

“P” refers to Pump connection. NRV should be fitted on the P port.

“C” refers to Cylinder side connection. Pressure adapter should be fitted on the C port.

“T” refers to the Tank side connection.